


BATEC HIBRID 2 HANDBIKE PACKAGING PROCEDURE

Made by	Aprobbed by
 Operations Manager (08/02/2024)	 Técnico Responsable (08/02/2024)

OBJECTIVE

Properly pack the Batecs of the Hibrid 2 handbike.

SCOPE

This document has an impact on production and warehouse staff.

PROCEDURE

Follow all the steps below to pack the Batec Hibrid 2 handbike.

1 - PREPARING THE BASE PACKAGING OF A BATEC HIBRID 2

1.1 - Take the wooden base and four polystyrene dowels. Each block must have two adhesive sides, one part adhesive in the narrow part and the other in the wide part.



1.2 - Place four polystyrene dowels on the sides of the base in parallel, with the narrow adhesive part facing downwards and the other wide adhesive part facing outwards. Leave the middle hole free for the clamping flange.




1.3 - Place the Batec on top of the wooden base with the easel resting on the two first polystyrene back studs.



1.4 - Fasten the wheel with a two flanges, protect both sides of the stand with honeycomb film and fasten both sides of the stand with a flange too.



1.5 - Adjust the fixing bar until it stops according to the indications of the arrow.

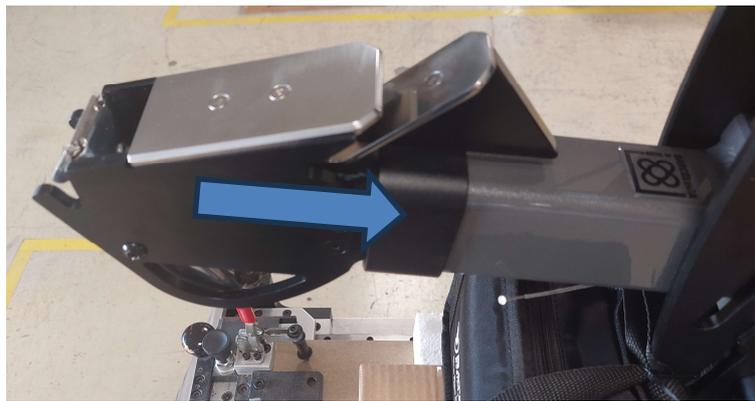

1.6 - Fasten the chair bar with a flange.



2 – CHARGER & ACCESSORIES

2.1 - Place the Charger bag resting on the trestle by fastening it with two flanges and the weights and accessories fitted between the cleats.




3– DISASSEMBLY OF GRIPS

3.1 – The crank grips are removed with a fixed wrench.



3.2 - Protect the disassembled elements with bubble wrap.

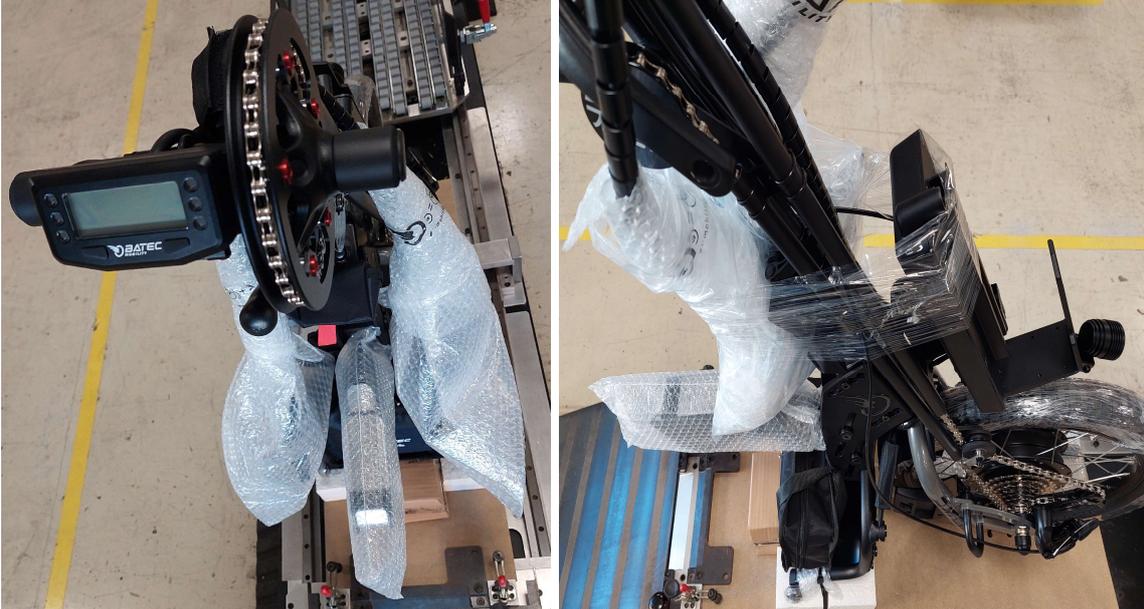

4 – PACKAGING

4.1 - Place the Batec inside the box and put 4 columns of cardboard.





5 – CLOSE, SEAL AND LABEL

5.1 – Stick CE label and seal.

